



Demonstrate the use of DHCP

Step 1 : Open Cisco Packet Tracer,

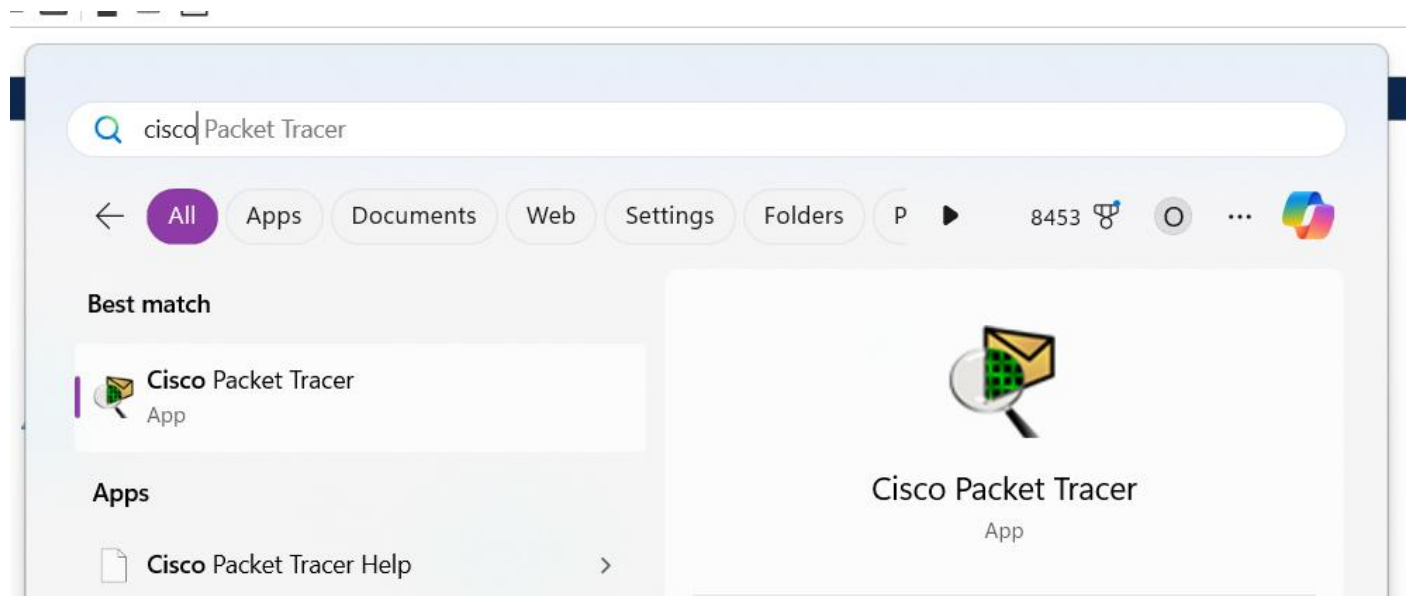


Step 2 : Drag and Drop : PC's, Switch, Server and connect them using suitable wire,

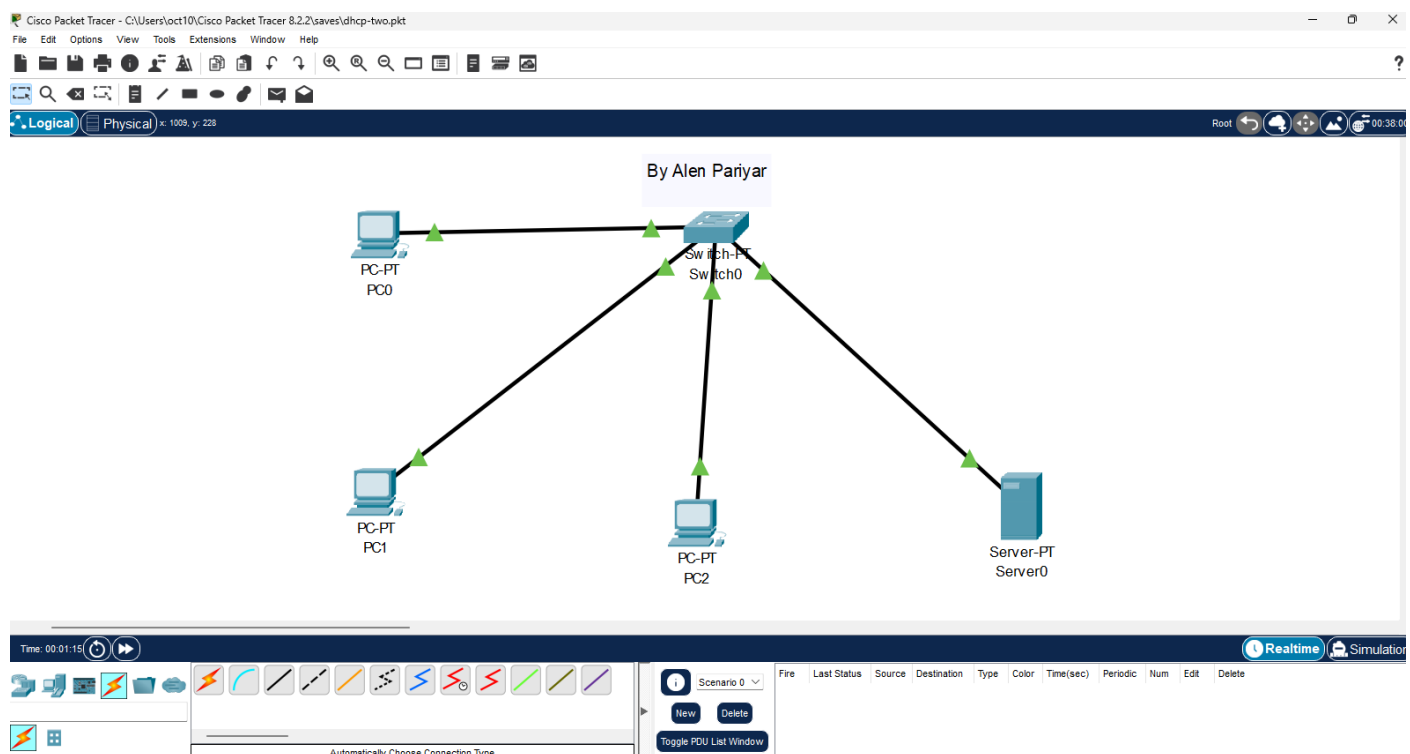

Step 3: Setup and Configure IP address of Server,

- Click on Server icon,
- Click on Desktop Tab
- Click on “IP Configuration”

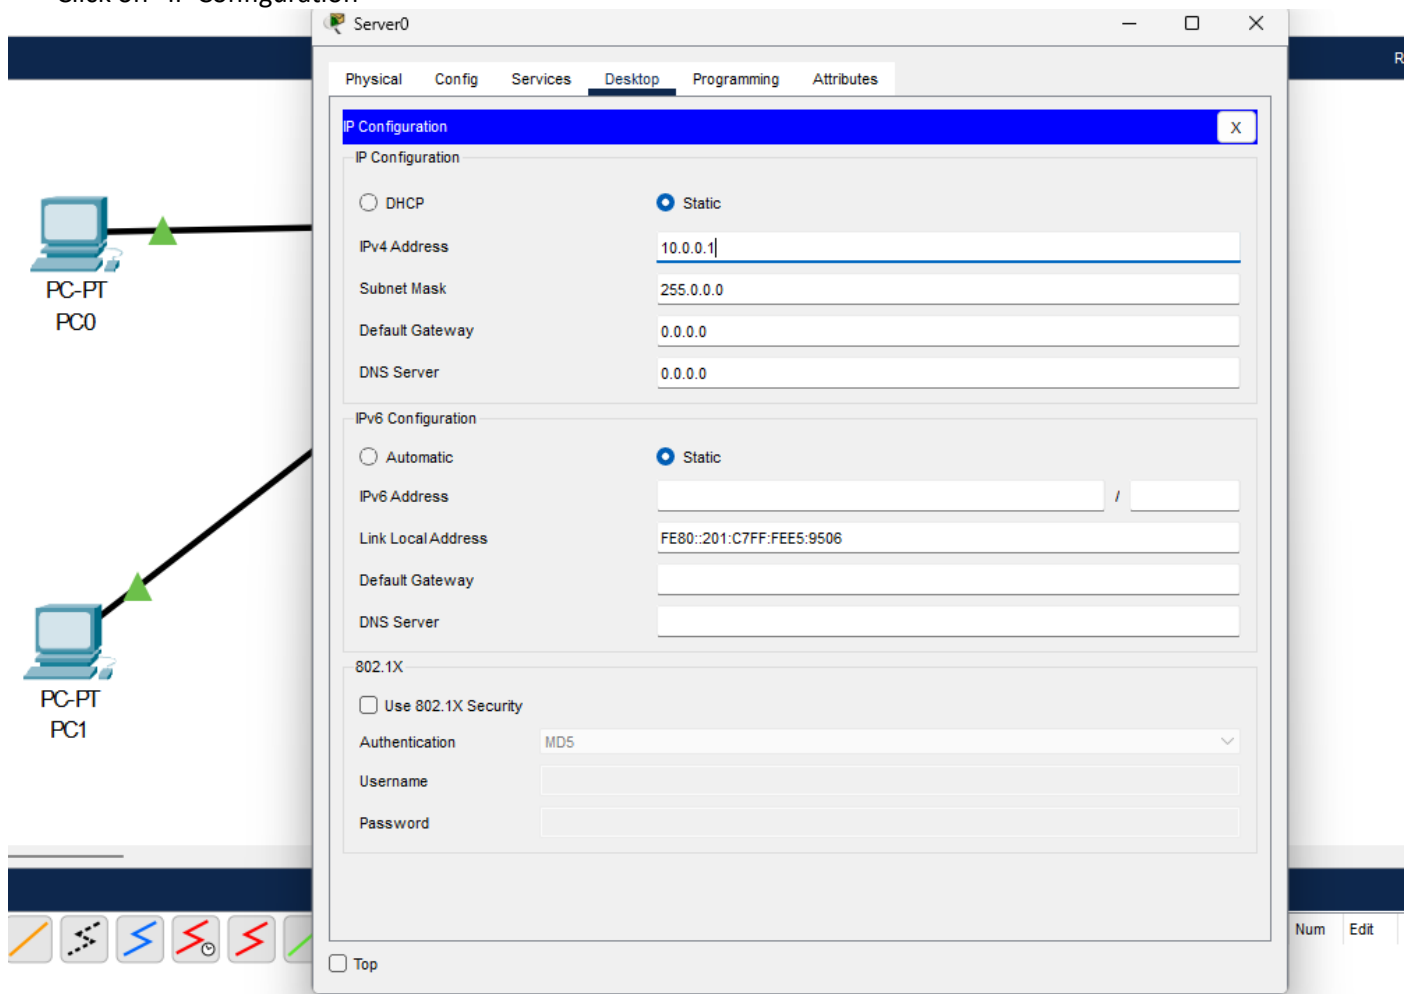

Step 5: Configure DHCP Service,

- Click on Server icon,
- Click on Services Tab
- Click on DHCP

Server0

Physical Config **Services** Desktop Programming Attributes

SERVICES

- HTTP
- DHCP**
- DHCPv6
- TFTP
- DNS
- SYSLOG
- AAA
- NTP
- EMAIL
- FTP
- IoT
- VM Management
- Radius EAP

DHCP

Interface: FastEthernet0 Service: ☒ On ☐ Off

Pool Name: NewServerPool

Default Gateway: 10.0.0.1

DNS Server: 0.0.0.0

Start IP Address: 10.0.0.0

Subnet Mask: 255.0.0.0

Maximum Number of Users: 512

TFTP Server: 0.0.0.0

WLC Address: 0.0.0.0


Pool Name	Default Gateway	DNS Server	Start IP Address	Subnet Mask	Max User	TFTP Server	WLC Address
NewServerPool	10.0.0.1	0.0.0.0	10.0.0.0	255.0.0.0	512	0.0.0.0	0.0.0.0
serverPool	10.0.0.1	0.0.0.0	10.0.0.0	255.0.0.0	512	0.0.0.0	0.0.0.0

☐ Top


Then, click on Add.

Step 6: Setup IP Address in each connected PC using DHCP,

- Click on PC icon,
- Click on Desktop Tab,
- Click on “IP Configuration”,
- In IP Configuration select on DHCP,

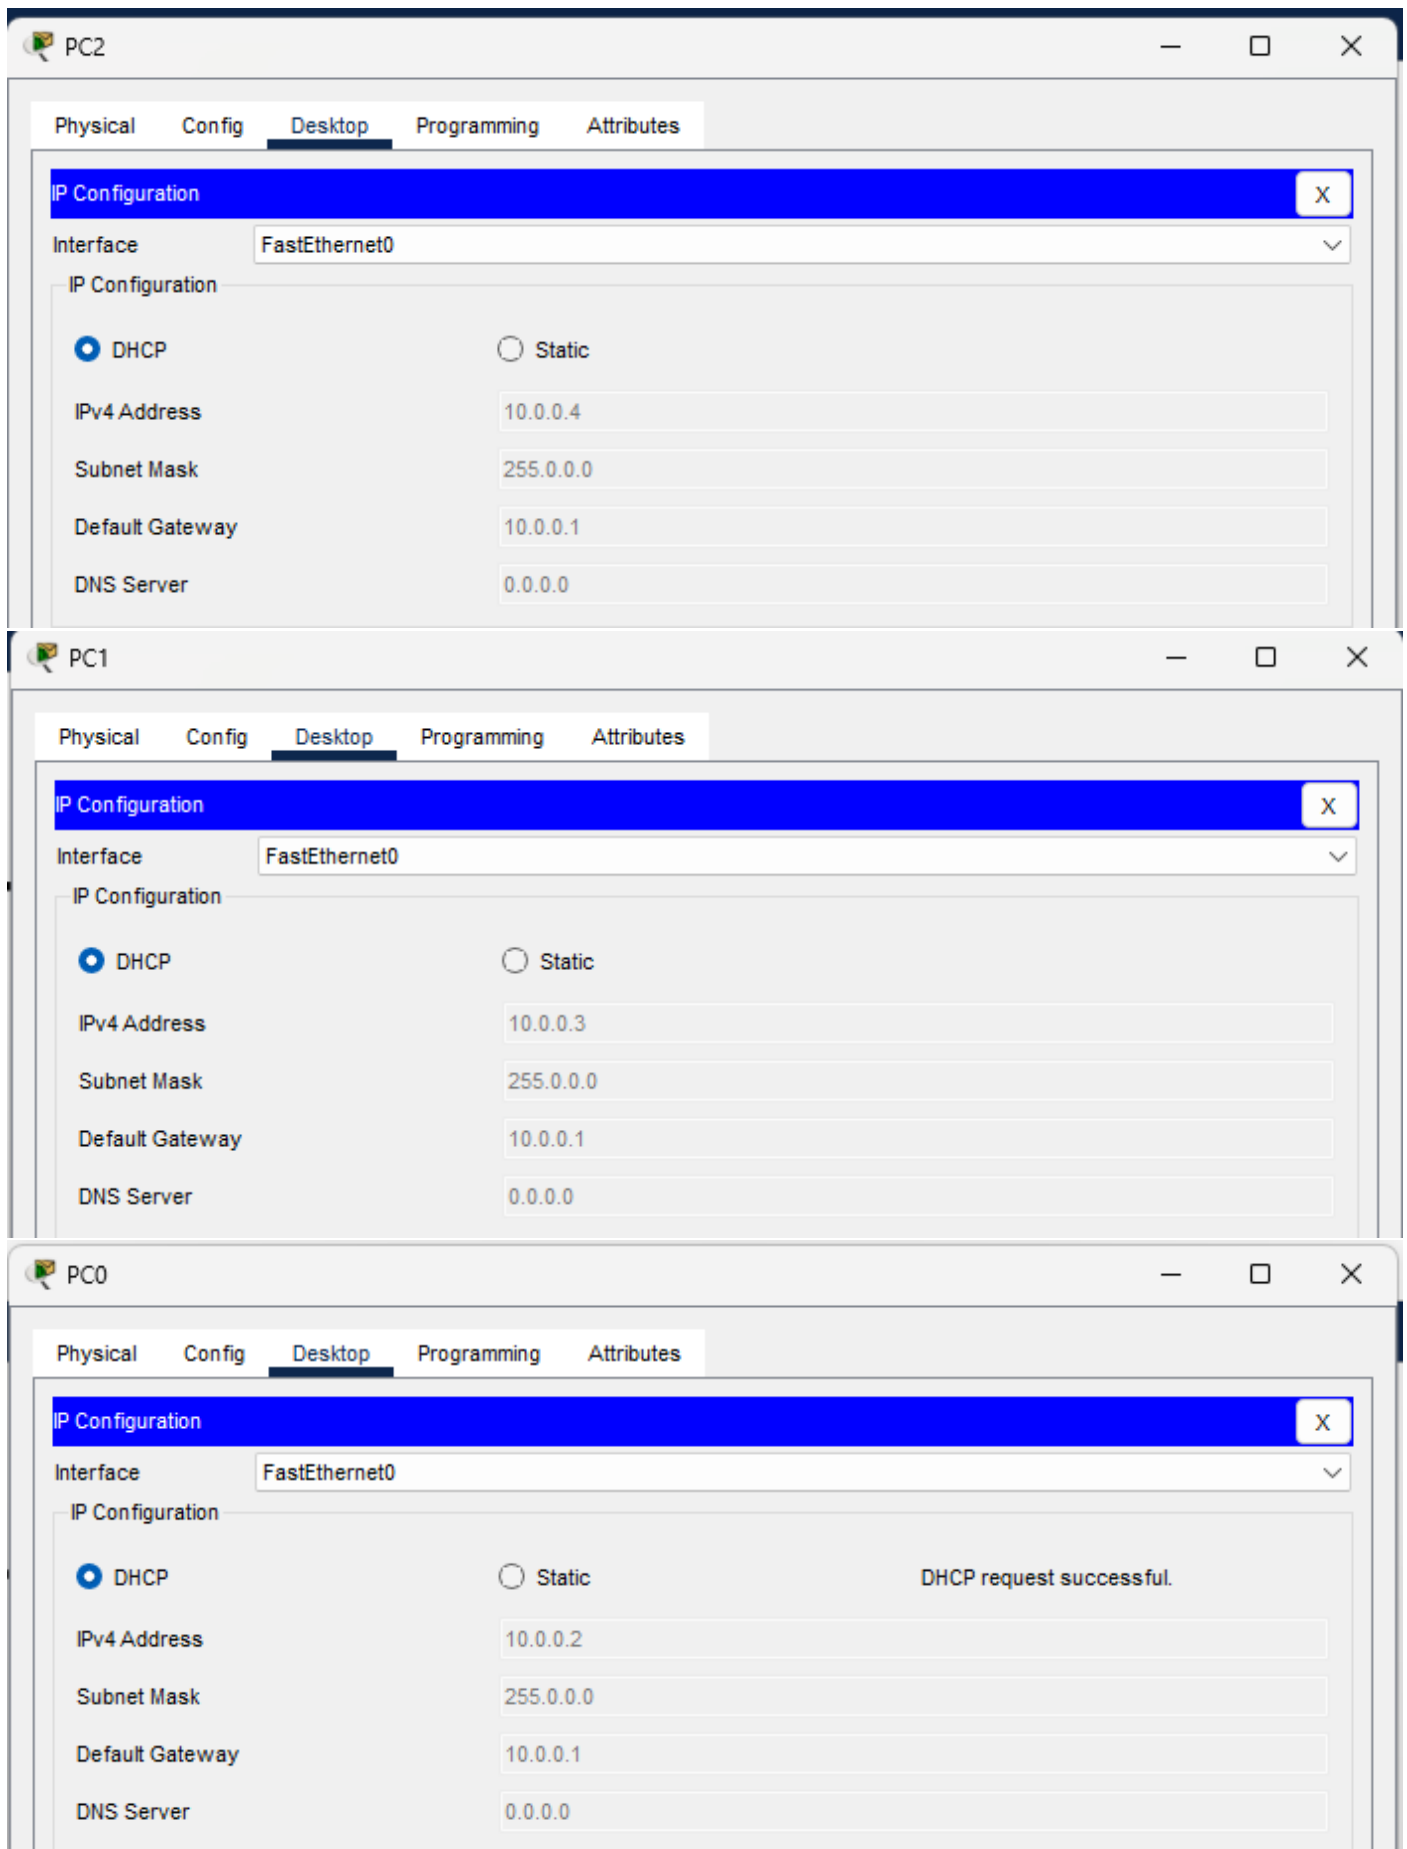

Step 7 : Check PING command using the obtained IP Address,

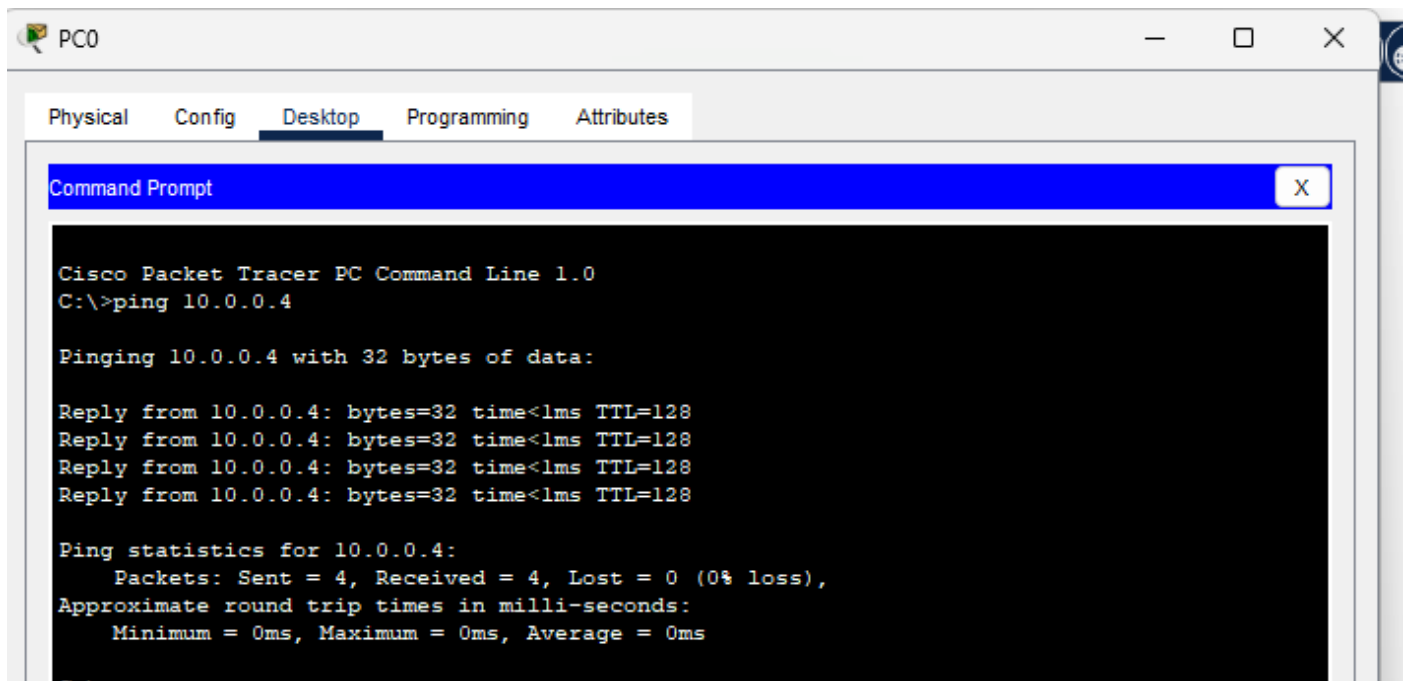

PING from PC0 (10.0.0.2) to PC2 (10.0.0.4) is getting reply,